



The controller has two options for the fan terminals 1/2, these are constant run and temperature controlled. By pressing the up and down buttons down for 5 seconds you can change which option to use. The led display will show F1 or F2 by pressing the Up or Down button again you can switch between the two. F1 is for temperature controlled and F2 is for constant run. By using F1 energy savings can be made, as the fan will only run when heating is being called for.

For additional information please refer to the installation guide.

Fan wiring diagram for providing additional energy savings